






Montageanleitung / Assembly Instructions

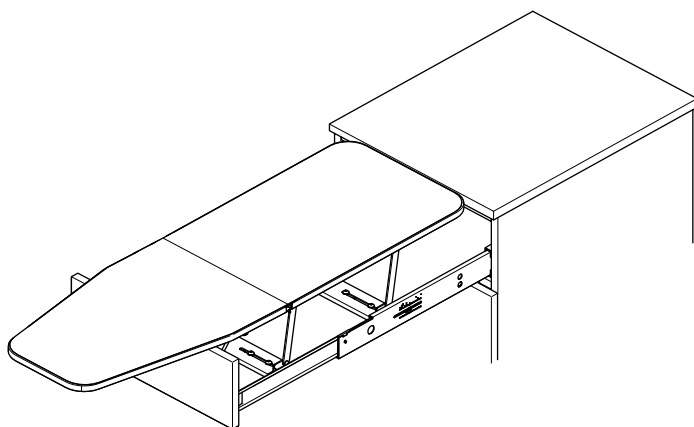

Einbau-Bügelbrett / Pull-out Ironing

9315928

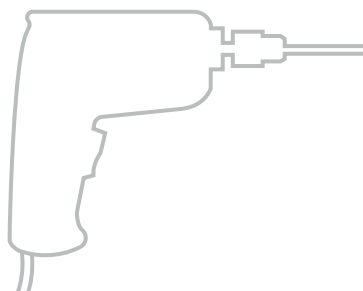

50,27,01,07,61

4x

(Ø5x11mm)



50,28,01,07,49

4x

(Ø3x11mm)



50,27,01,07,97

4x


(Ø4x11mm)



50,27,01,07,08



6x

(Ø4x11mm)

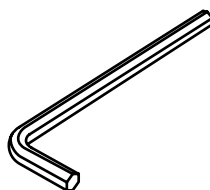


1x


(4mm)

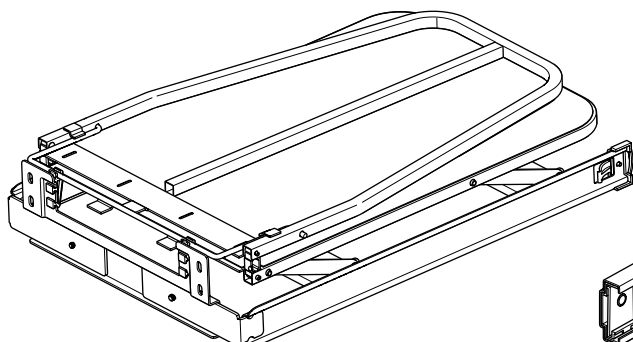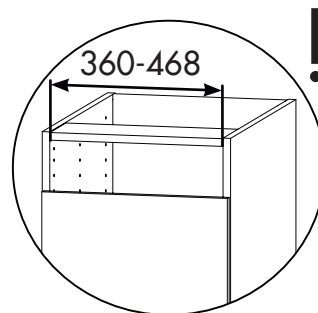




1x

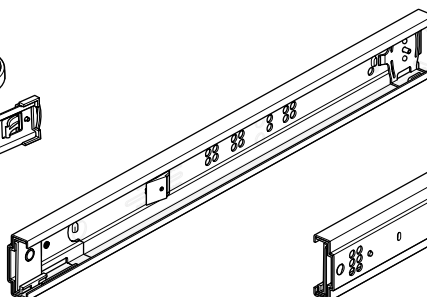

1x


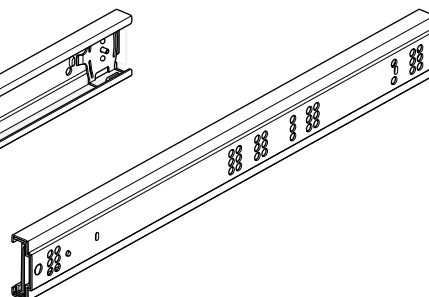


1x

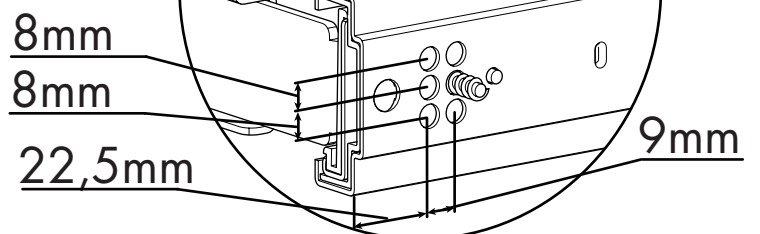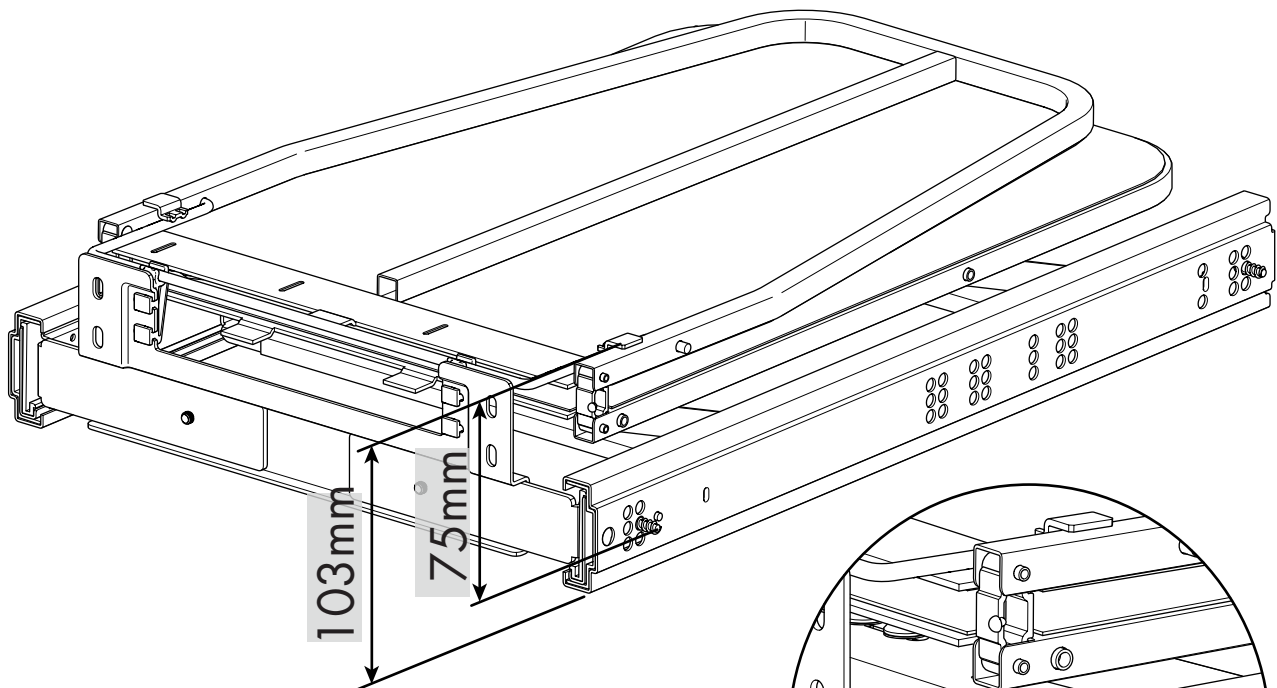
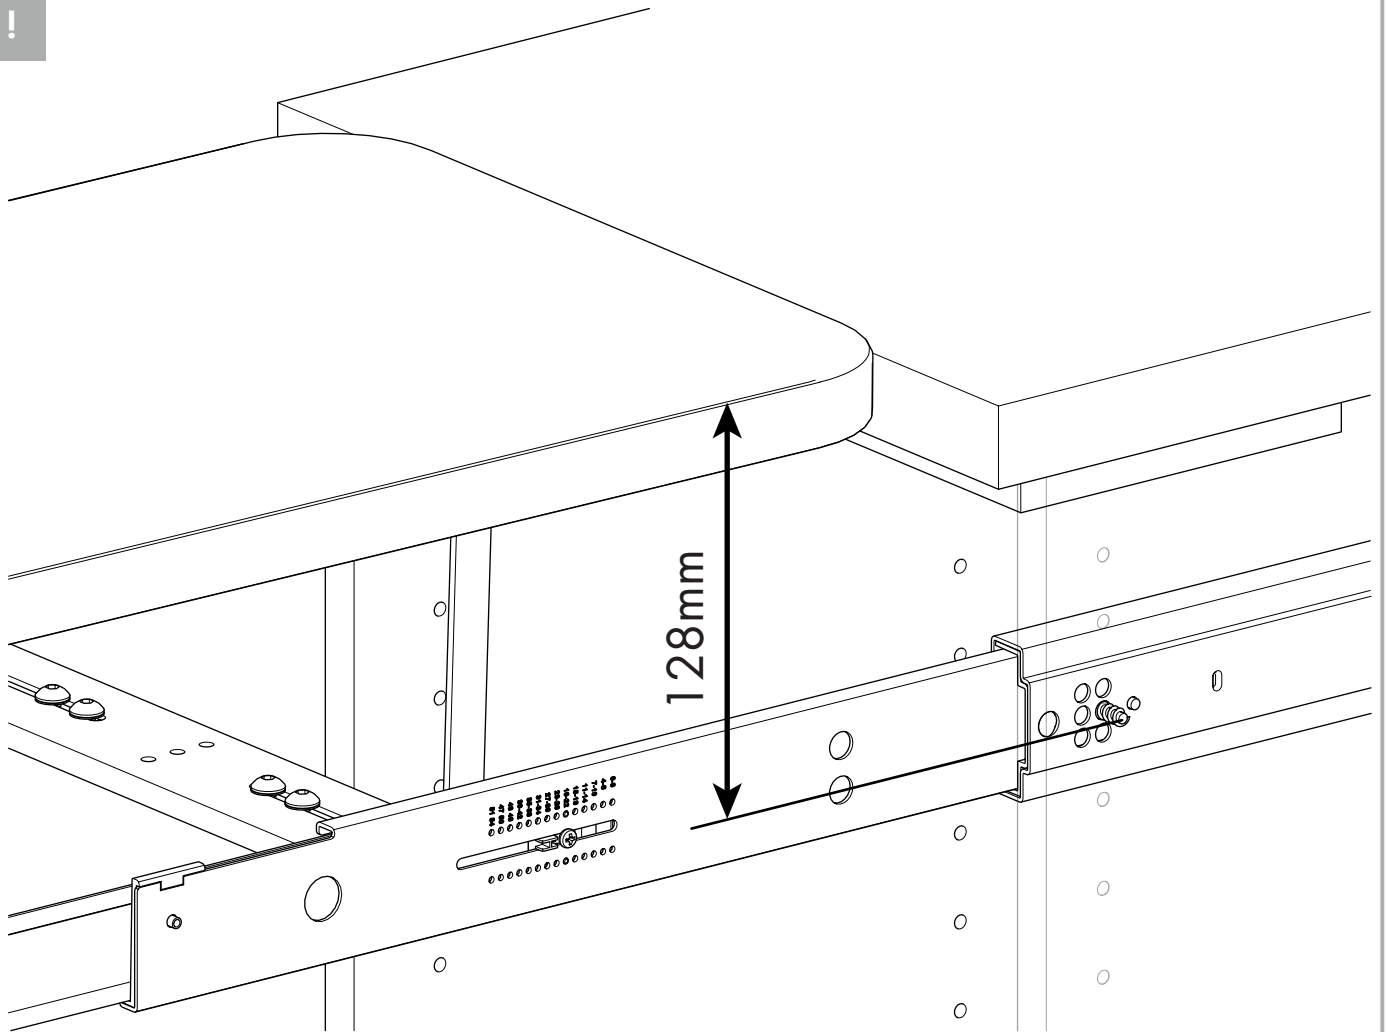


1



A mm	B mm	C mm
28	224, 233, 256	224, 233
37	224, 233, 256	224, 233

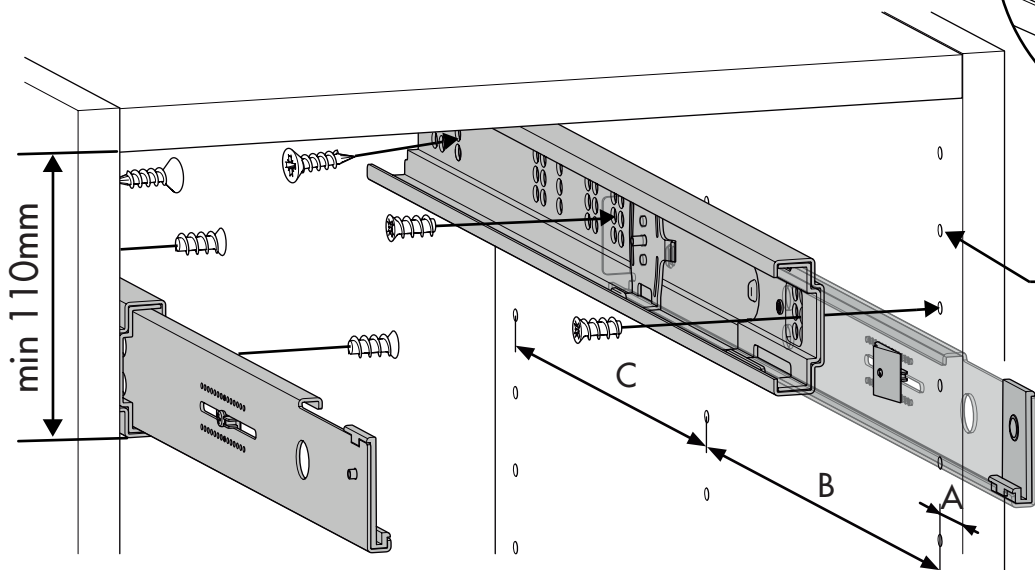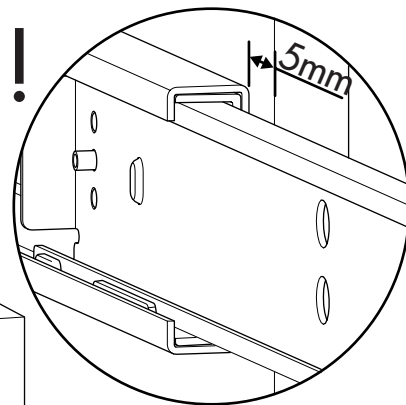


Ø5mm

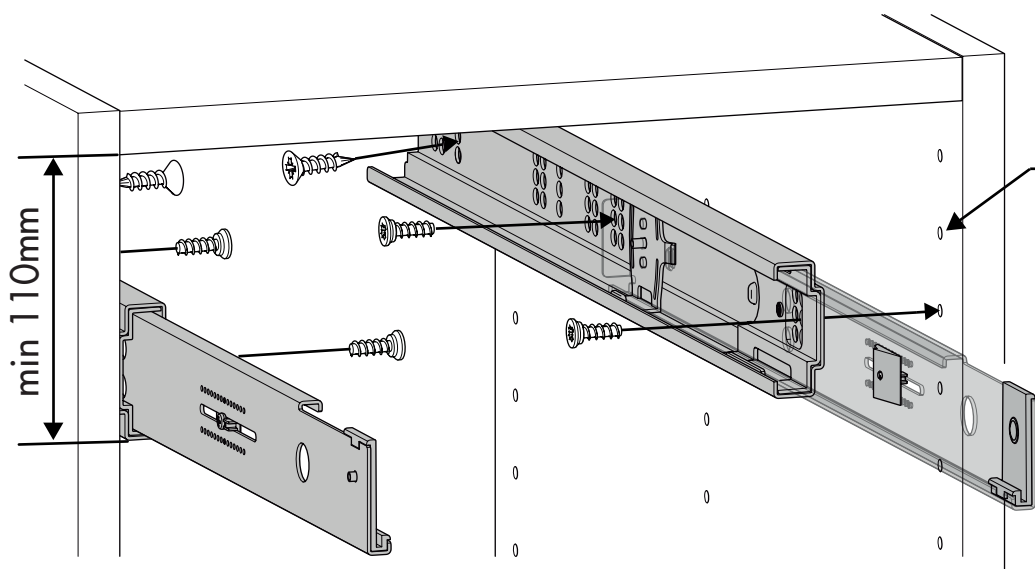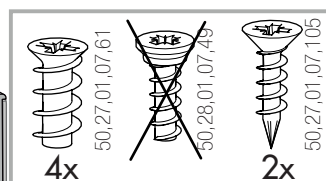


Ø3mm

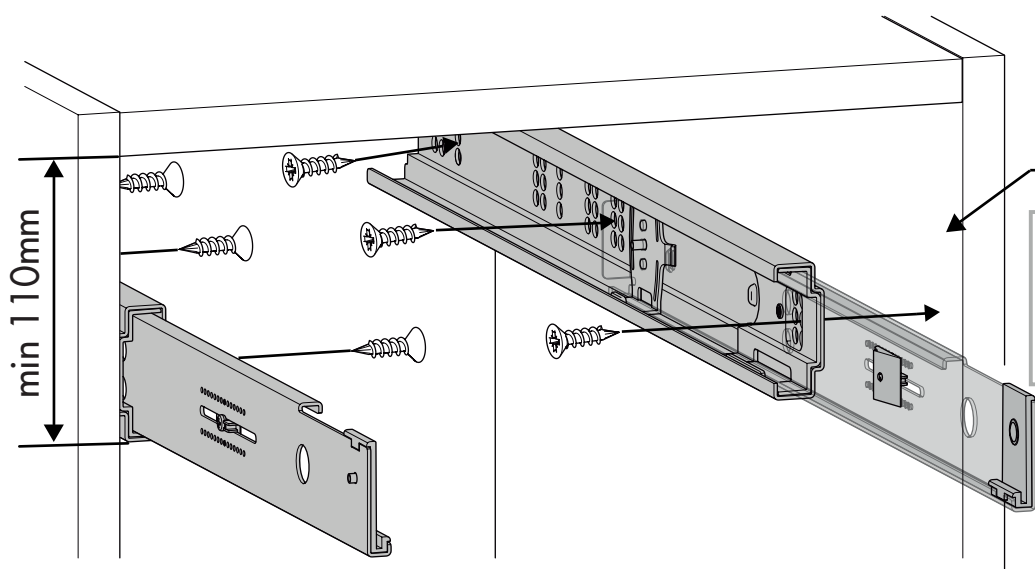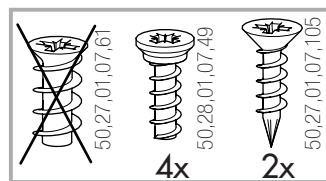


No holes








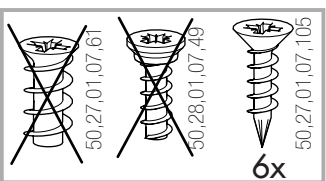




3

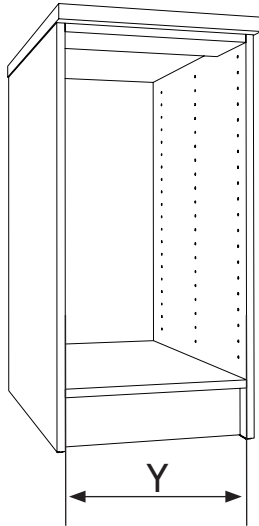


! $X=X$

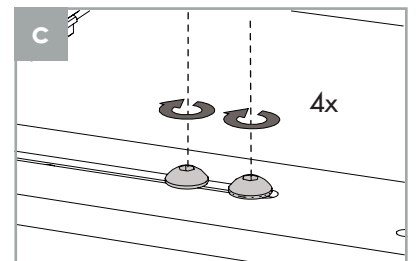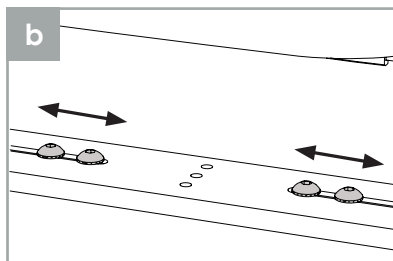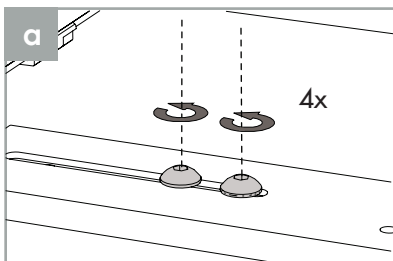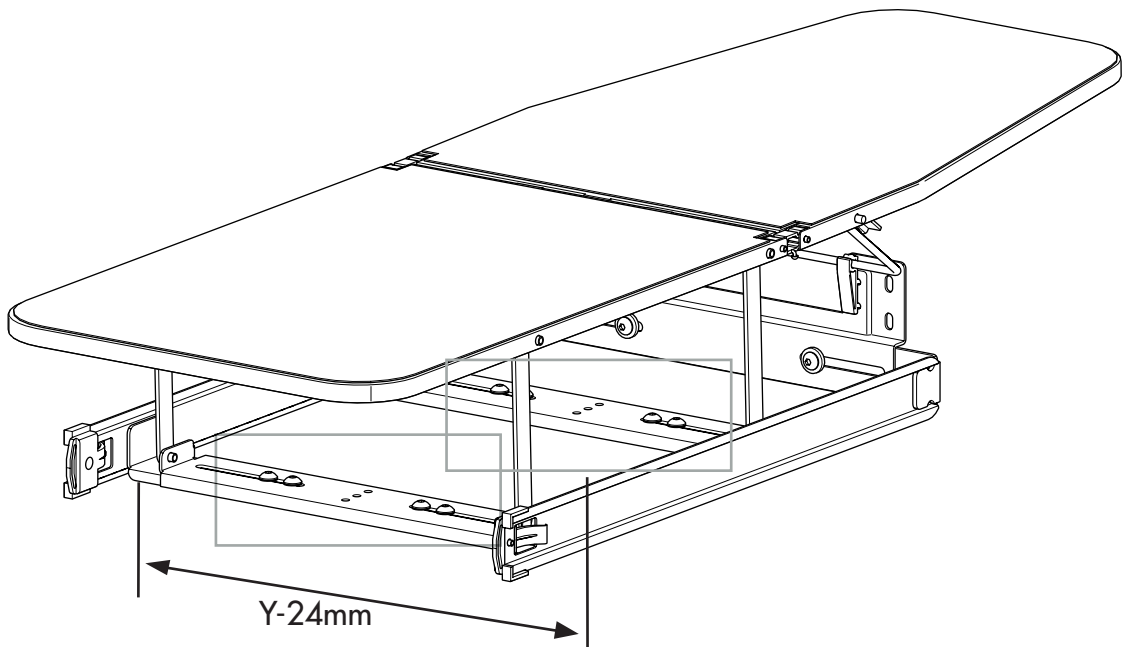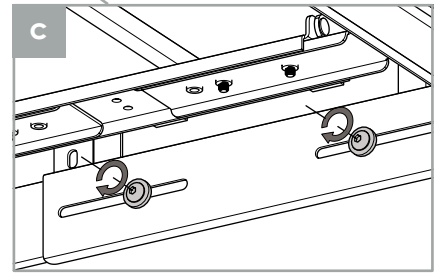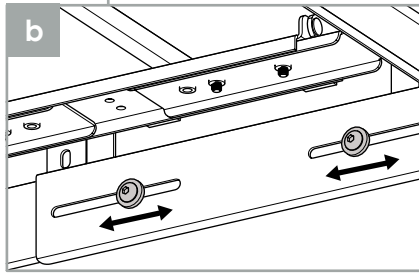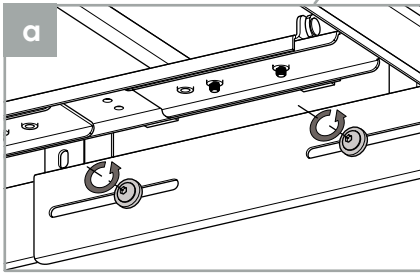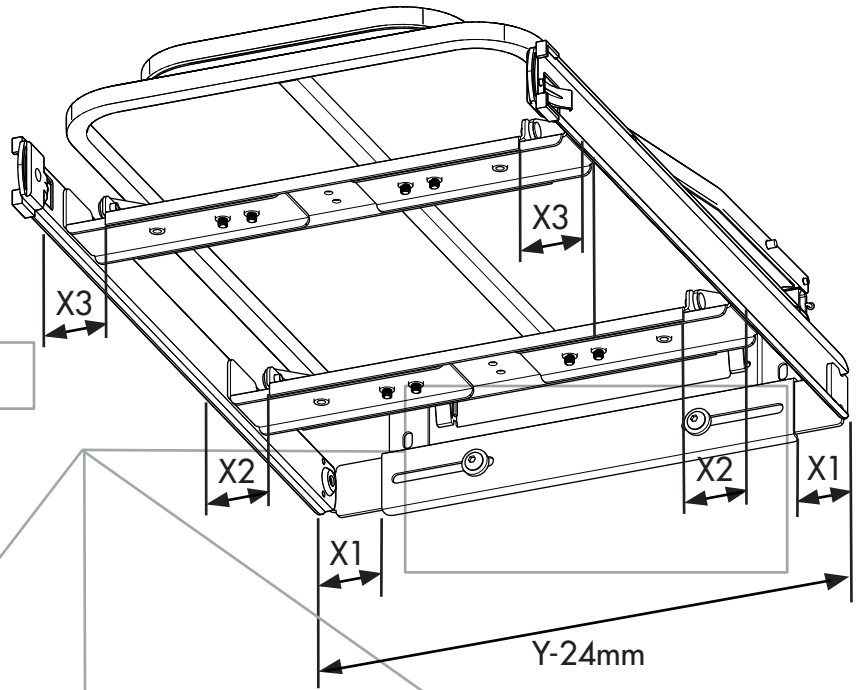


4

CLICK!

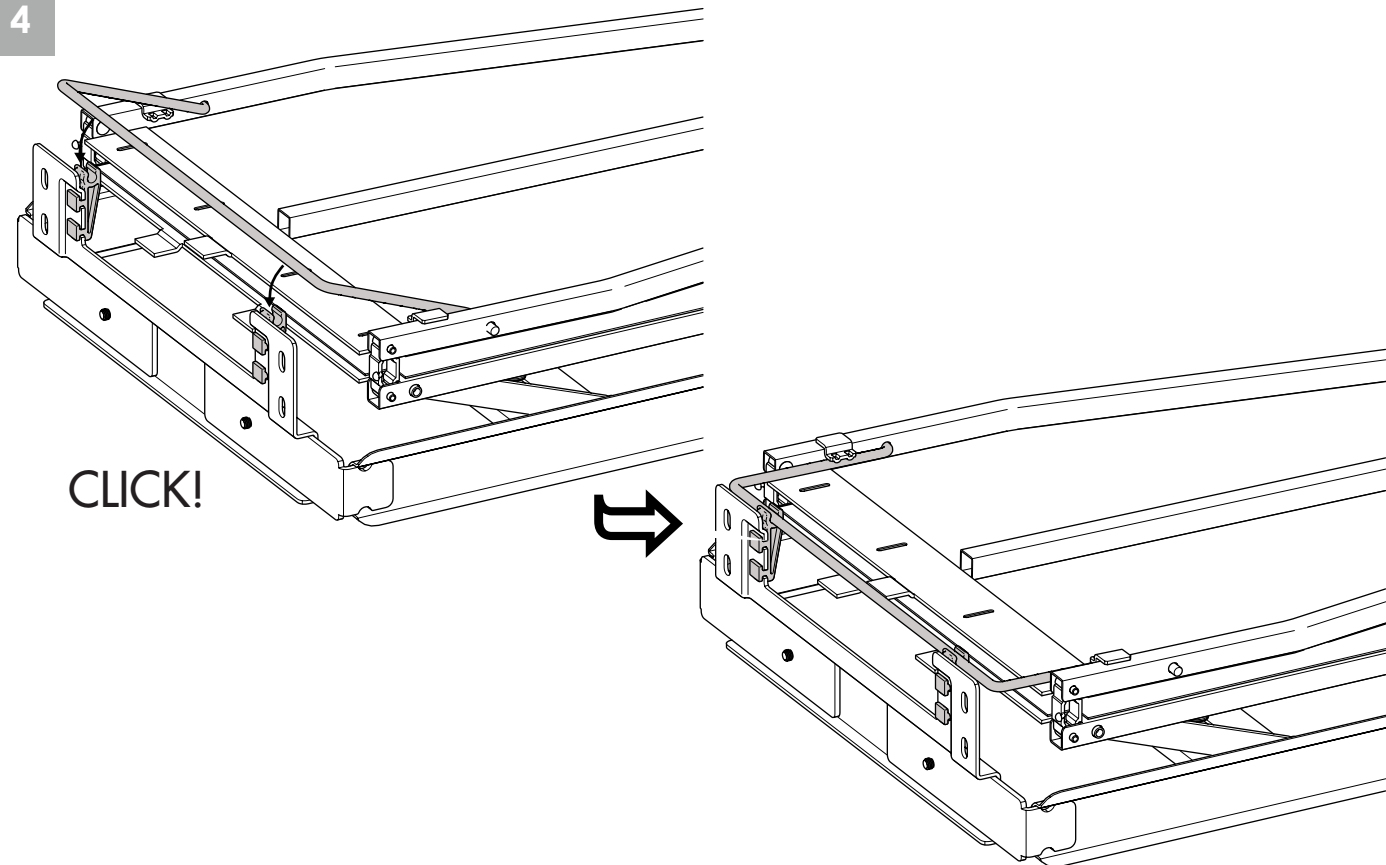

5

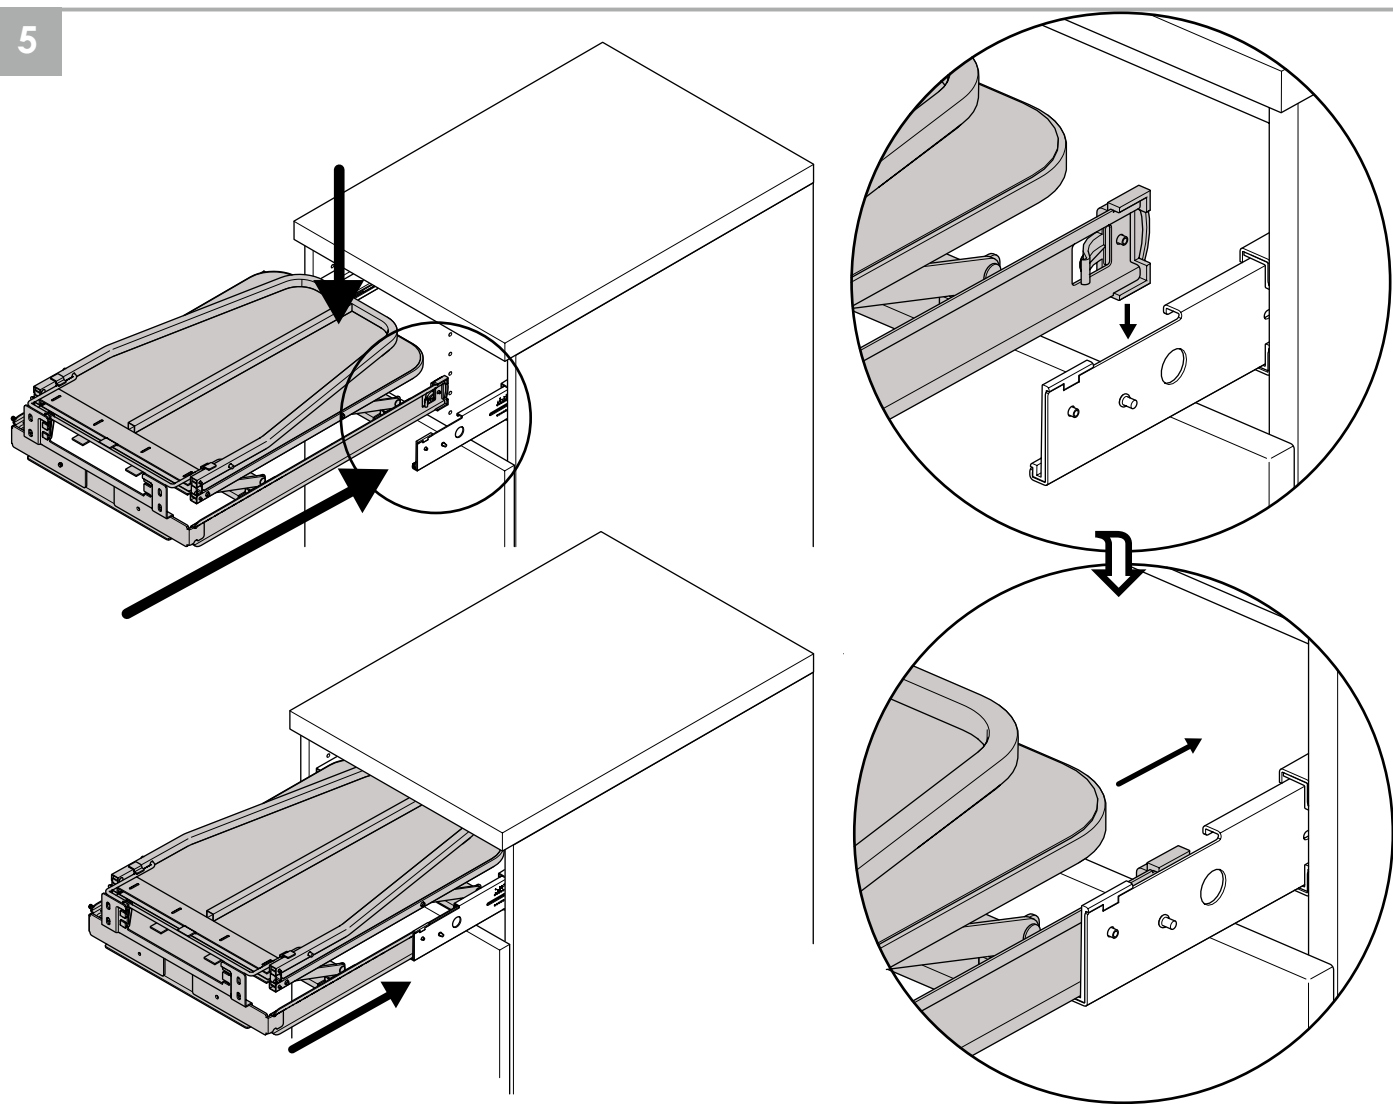



$$B=A-3\text{mm}$$
$$C1=C2$$

